


S1695 Handheld Transmitter

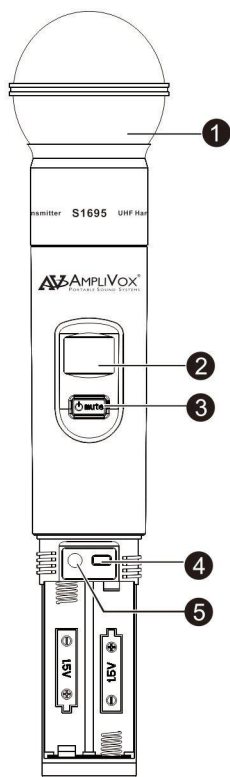

Functions:

- ① Interchangeable microphone head.
- ② LCD screen
- ③ Power/Mute Control switch
Middle position is Mute.
- ④ Select button
- ⑤ Microphone input sensitivity adjustment

Handheld Transmitter



Transmitter Status Display

Push the MUTE/⏻ button 2 second, the display will skip to the group and channel selection. Continuously push two times on the MUTE/⏻ button to turn on MUTE/⏻ function, to turn off the MUTE/⏻ function with the same operation.

Manually selecting the group and channel: **[select]**

Push and hold the button until the group and channel display flashes alternately, push the **[select]** button to change the channel.

Transmitter data lock and unlock: **[select] + ⏻**

 
Push the mute and select button at the same time to lock and unlock the transmitter data. When locked, channel cannot be changed.

Battery displayer:

Display the transmitter battery level.

Battery Replacement

- The life expectancy of two alkaline batteries is about 10 hours.
- When the power indication symbol on the display screen keeps flashing as shown in the left diagram, the batteries should be replaced immediately, as shown in the above.



Specifications

S1695 Handheld Transmitter

Audio Input Level maximum

0 dBV

Dimensions (including the microphone)

9 5/8" H x 2" DIA

Weight

8.4 oz

Battery Requirements

2 "AA" alkaline batteries or rechargeable batteries

Battery Life

> 10 hours (Alkaline)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

MADE IN CHINA- AMPLIVOX