


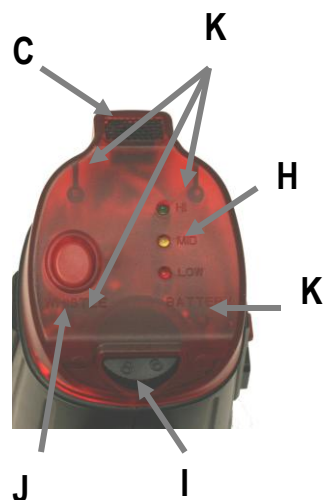
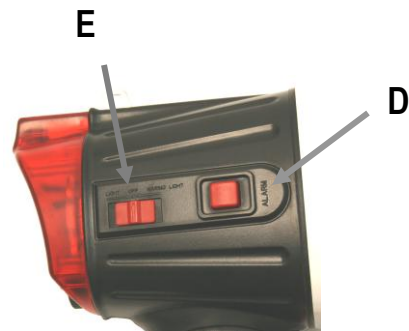
Thank you for purchasing

## AmpliVox S604 - SAFETY STROBE MEGAPHONE.

We encourage you to visit our website [www.ampli.com](http://www.ampli.com) to register your product for its warranty coverage, sign up to receive our newsletter, download our catalog, and learn more about the complete line of AmpliVox audio visual products, including portable PA systems, and lecterns.

### OPERATING INSTRUCTIONS

- Batteries:** Locate battery compartment door on bottom of hand grip (A). Open and insert 8 "A-A" batteries (not included). Follow battery diagram on grip for battery direction.
- Battery Status:** The megaphone has 3 LED's (H); HIGH, MID, LOW, that tells you the current strength of the batteries. **Note:** *Drained batteries do not give sufficient sound volume. Replace the batteries when **LOW LED** lights when trigger is squeezed. Remove batteries when not in use for a long time.*
- Talk:** Place mouth about one inch from microphone (C), squeeze trigger (B) and speak. To increase volume, rotate volume control (I) counter clockwise .
- Alarm:** To activate **ALARM**, press alarm button (D) located on the right side of megaphone. Press again to turn off.
- Whistle:** To activate **WHISTLE**, press whistle button (J) located on back of megaphone. Press again to turn off.
- Record:** Slide switch (F) on left side of megaphone to **REC**. Press and hold record button (G) while speaking into microphone (C), record your message. Recording time is approximately 10 seconds. Recording will stop when you remove finger from button.
- Record Playback:** Slide switch (F) to **PLAY**. Message will be heard. **Note:** *Volume control has no effect on playback. Volume is set at HIGH.*
- Flashlight:** Located in tip (M) of megaphone is an LED flashlight. To turn on, slide switch (E) on right side of megaphone to **LIGHT**.
- Emergency Flashing Strobe Light:** Slide switch (E) on right side of megaphone to **WARNING LIGHT**. Four LED's (K) will start to flash.
- Property Label:** (L) Use marking pen to write ownership name on megaphone.



**IF YOU HAVE ANY QUESTIONS OR  
 PROBLEMS PLEASE CALL OUR CUSTOMER  
 SERVICE DEPARTMENT AT 1-800-267-5486**

## WARRANTY

### Limited One (1) -Year Warranty

AmpliVox warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase ("Warranty Period").

During the Warranty Period, AmpliVox will repair or replace (at AmpliVox's discretion) this product or any defective parts ("Warranty Service").

Repair or replacement under the terms of this warranty does not give right to any extension or a new beginning of the period of warranty.

## CLAIMS UNDER THE WARRANTY

To obtain Warranty Service, contact AmpliVox (800-267-5486) to be assigned a Return Authorization number (RA#). After receiving a RA#, the defective unit is to be returned to AmpliVox in either its original packaging or packaging affording an equal degree of protection. You will bear the cost of shipping the product to AmpliVox. If the product is covered by the warranty, AmpliVox will bear the cost of shipping product back to you after the completion of service under this warranty.

Return shipping will be charged to you for products not covered by the warranty or requiring no warranty repair.

The following information must be presented to obtain Warranty Service: (a) the RA# must be clearly and legibility marked on the outside of shipping carton, (b) proof of purchase, which clearly indicates the name and address of the seller, the date of purchase and the product type, which is evidence that this product is within the Warranty Period. Please further include (c) your return address, (d) daytime telephone number, and (e) reason for return.

## LIMITATION OF WARRANTY

This warranty is only valid for the original purchaser and will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party. The warranty provided by AmpliVox in this statement applies only to products purchased for use, and not for resale. It does not apply to open box purchases, which are sold "as is" and without any warranty. Specifically exempt from warranty are limited-life consumable components subject to normal wear and tear, such as microphone windscreens, ear cushions, modular plugs, ear tips, decorative finishes, batteries, and other accessories. This warranty is invalid if the factory-applied serial number, date code label, or product label has been altered or removed from this product. This Warranty does not cover cosmetic damage or damage due to misuse, abuse, negligence, Acts of Nature, accident, disassembling or modification of, or to any part of, the product. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than AmpliVox. Any unauthorized repairs will void this warranty.

REPAIRS OR REPLACEMENTS AS PROVIDED UNDER THIS WARRANTY ARE THE EXCLUSIVE REMEDY OF THE CONSUMER. AMPLIVOX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY LAW, THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES WHATSOEVER, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PRACTICAL PURPOSE.

NOTE! This warranty gives you specific legal rights. You may have other rights which vary from location to location. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or implied warranties, so the above exclusions may not apply to you. This warranty does not affect your legal (statutory) rights under your applicable national or local laws.



Dispose of the product according to local standards and regulations.

**AmpliVox - 650 Anthony Trail, Northbrook, IL 60062 - Phone: (800)267-5486 Fax: (800)267-5489 [www.ampli.com](http://www.ampli.com)**