

FREQUENCY CHART

514 - 544 MHz					
Channel	Frequency	Channel	Frequency	Channel	Frequency
1	514.1	33	523.8	65	519.3
2	543.9	34	529.5	66	538.9
3	529.1	35	540.3	67	527.5
4	521.5	36	518.3	68	515.5
5	537.0	37	522.4	69	529.8
6	517.4	38	535.6	70	540.9
7	533.1	39	515.0	71	514.8
8	524.5	40	528.6	72	543.2
9	539.5	41	543.7	73	528.9
10	526.3	42	521.1	74	520.4
11	538.0	43	536.4	75	536.6
12	519.7	44	517.6	76	516.7
13	531.0	45	524.7	77	525.3
14	540.6	46	532.6	78	530.4
15	523.2	47	539.7	79	542.1
16	534.8	48	515.8	80	518.9
17	517.1	49	529.3	81	537.6
18	528.4	50	537.2	82	534.3
19	542.5	51	542.7	83	523.4
20	520.0	52	518.5	84	526.7
21	531.2	53	541.5	85	520.6
22	524.1	54	522.1	86	527.7
23	536.2	55	538.2	87	518.0
24	514.4	56	525.8	88	532.1
25	526.9	57	527.1	89	538.5
26	533.9	58	533.3	90	523.6
27	539.1	59	531.6	91	533.6
28	541.3	60	535.2	92	535.9
29	516.3	61	514.6	93	515.2
30	520.9	62	543.4	94	530.7
31	532.8	63	528.1	95	542.2
32	537.4	64	522.7	96	524.3