


Thank you for purchasing




AmpliVox S602MR MITY-MEG PLUS 25 Watt MEGAPHONE

We encourage you to visit our website www.ampli.com to register your product for its warranty coverage, sign up to receive our newsletter, download our catalog, and learn more about the complete line of AmpliVox audio visual products, including portable PA systems, and lecterns.

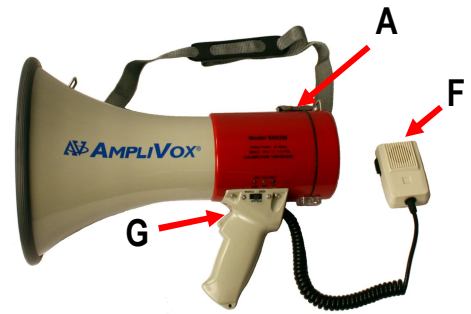

OPERATING INSTRUCTIONS

- **Batteries:** Locate battery compartment latch on top of megaphone (A). Open and insert 8 "C" size batteries (not included) into the battery sleeves (B). Follow battery diagram on sleeves (C) for battery direction. Insert sleeve with battery diagram facing to outside. Close megaphone.
 - **Battery Status:** The megaphone has 3 LED's LOW, MID, HIGH, (D) that will tell you the current strength of the battery. **Note:** *Drained batteries do not give sufficient sound volume. Replace the batteries when LOW LED lights when trigger is squeezed. Remove batteries when not in use for a long time.*
 - **Talk:** Make sure that the switch (E) is in the **Off / Talk** position. Place mouth about one inch from microphone (F), squeeze trigger (G) and speak or you can slide switch (H) on the side of the microphone up into the locked **ON** position. **CAUTION: If you do not move switch into the OFF position when done, megaphone will stay ON and drain the batteries.** Microphone can also be removed from bracket. To increase volume, rotate volume control knob (I) from bottom to top.
- When you have a fresh set of batteries you may get "feedback" when talking. To eliminate feedback you need to turn down the gain. Locate the gain control (J) in the battery compartment. Turn until you do not hear any feedback. **Less gain, turn counter clockwise. More gain, turn clockwise.**
- **Siren:** To activate **Siren**, move switch (E) to the right. Siren will be heard. There is no control of the volume.
 - **Whistle:** To activate **Whistle**, move switch (E) to the left. Whistle will be heard. There is no control of the volume.

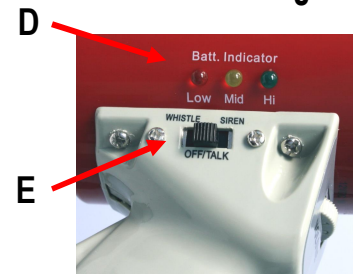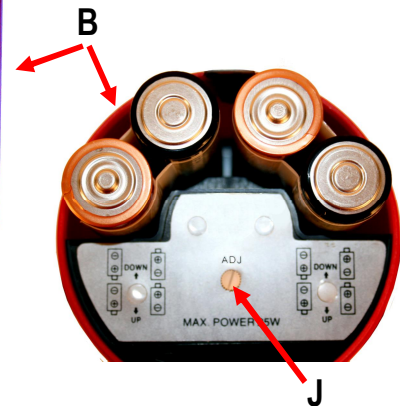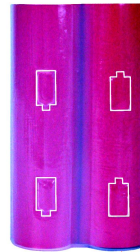

WHY USE RECHARGEABLE BATTERIES?

Save Money—While rechargeable batteries cost more initially, they can be reused hundreds of times and last for years.

Protect the Environment—Conserve Resources

The corrosive materials and heavy metals in batteries can impair human health and the environment. Rechargeable batteries use greatly reduces the quantity of batteries manufactured, used and discarded.

- **Rechargeable Battery Pack is available for this model:** Optional **\$1405** Lithium-ion battery pack with built-in wall charger. Replaces the 8 "C" size batteries.
- A fully charged battery will provide 8 hours of typical operation, defined as speaking 35% of the time at mid volume, and **over one year of standby / idle time**

Available only from AmpliVox Resellers or AmpliVox Portable Sound Systems



**IF YOU HAVE ANY QUESTIONS OR PROBLEMS PLEASE CALL
 OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-267-5486**

WARRANTY

Limited One (1) Year Warranty

AmpliVox warrants this product to be free from defects in materials and workmanship (subject to the terms set forth below) for a period of one (1) year from the date of purchase (Warranty Period).

During the Warranty Period, AmpliVox will repair or replace (at AmpliVox discretion) this product or any defective parts (Warranty Service).

Repair or replacement under the terms of this warranty does not give right to any extension or a new beginning of the period of warranty.

CLAIMS UNDER THE WARRANTY

To obtain Warranty Service, contact AmpliVox (800-267-5486) to be assigned a Return Authorization number (RA#). After receiving RA #, the defective unit is to be returned to AmpliVox in either its original packaging or packaging affording an equal degree of protection. You will bear the cost of shipping the product to AmpliVox. If the product is covered by the warranty, AmpliVox will bear the cost of shipping product back to you after the completion of service under this warranty.

Return shipping will be charged to you for products not covered by the warranty or requiring no warranty repair.

The following information must be presented to obtain Warranty Service: (a) the RA# must be clearly and legibility marked on the outside of shipping carton, (b) proof of purchase, which clearly indicates the name and address of the seller, the date of purchase and the product type, which is evidence that this product is within the Warranty Period. Please further include (c) your return address, (d) daytime telephone number, and (e) reason for return.

LIMITATION OF WARRANTY

This warranty is only valid for the original purchaser and will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party. The warranty provided by AmpliVox in this statement applies only to products purchased for use, and not for resale. It does not apply to open box purchases, which are sold as is and without any warranty. Specifically exempt from warranty are limited-life consumable components subject to normal wear and tear, such as microphone windscreens, ear cushions, modular plugs, ear tips, decorative finishes, batteries, and other accessories. This warranty is invalid if the factory-applied serial number, date code label, or product label has been altered or removed from this product. This warranty does not cover cosmetic damage or damage due to misuse, abuse, negligence, Acts of Nature, accident, disassembling or modification of, or to any part of, the product. This warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than AmpliVox. Any unauthorized repairs will void this warranty.

Repairs or replacements as provided under this warranty are the exclusive remedy of the consumer. AmpliVox shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product except to the extent prohibited by law, this warranty is exclusive and in lieu of all other express and implied warranties what so ever, including but not limited to the warranty of merchantability and fitness for a practical purpose.

NOTE! This warranty gives you specific legal rights. You may have other rights which vary from location to location. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or implied warranties, so the above exclusions may not apply to you. This warranty does not affect your legal (statutory) rights under your applicable national or local laws.

